

# Fiilex


## Q5 COLOR

### User Guide

#### Safety Instructions

- DO NOT look into the light source. Be cautious of the high-intensity beam.
- DO NOT disassemble Q5 Color. This will void the warranty.
- DO NOT install Q5 Color in damp or wet locations.
- DO NOT obstruct the fixture's air vents.
- Use safety cable (not included) when rigging Q5 Color overhead.
- Only use Fiilex approved power supply and accessories. Failure to do so may damage the fixture.
- Shields, lenses or ultraviolet screens shall be changed if they have become visibly damaged to such an extent that their effectiveness is impaired, for example by cracks or deep scratches.
- The lamp shall be changed if it has become damaged or thermally deformed.
- The luminaire is intended for professional use only.

#### Parts Diagram

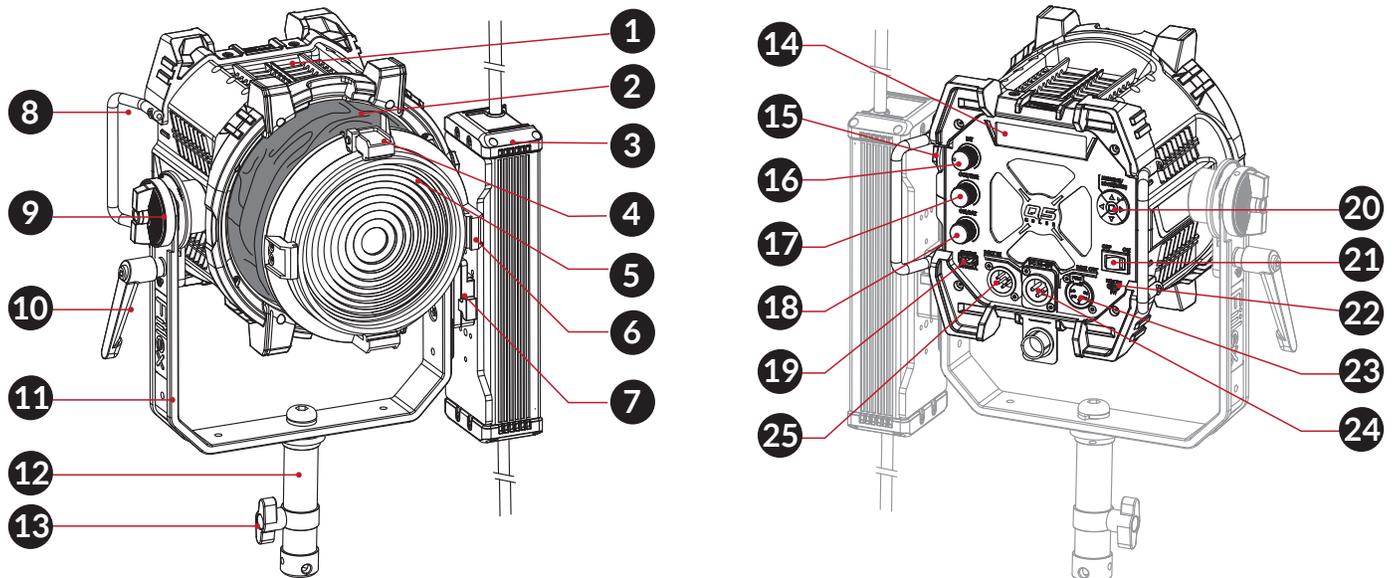

- |                            |                                   |  |
|----------------------------|-----------------------------------|--|
| 1. Vent Holes              | 10. Tilt Lock Lever               | 19. USB Type-A Port (5V/1A Power)              |
| 2. Water Repellent Fabric  | 11. Yoke (1/4"-20 UNC Screw Hole) | 20. Navigation Pad                             |
| 3. Power Supply Unit (PSU) | 12. Baby/Junior Pin Receiver      | 21. ON/OFF Switch                              |
| 4. Latch                   | 13. Mount Tightening Knob         | 22. USB Type-C Port<br>(For updating firmware) |
| 5. Fresnel Lens            | 14. OLED Display                  | 23. DMX Output (XLR-Female 5-pin)              |
| 6. Fresnel Lens Holder     | 15. Yoke Bolt                     | 24. DC Input Port                              |
| 7. Dual Locking V-Mount    | 16. Intensity Control Knob        | 25. DMX Input (XLR-Male 5-pin)                 |
| 8. Handles                 | 17. CCT/HUE Knob                  |  |
| 9. Beam Adjustment Knob    | 18. GN/SAT Knob                   |  |

## Fixture Operation

### • Mode Selection

Use Navigation Pad  to enter MODES menu, then navigate to select the desired mode.



### • Fixture Control

#### 1 Manual / Local :

Use Intensity Control Knob or the Navigation Pad  to control the parameters.

For CCT modes and HSI modes, use either CCT/HUE Knob and GN/SAT Knob or the Navigation Pad .




#### 2 DMX / RDM :

Display shows DMX connection status, NO DMX or DMX OK.



## Settings

Use Navigation Pad  to enter and edit SETTINGS. Navigate to the right to access additional settings.

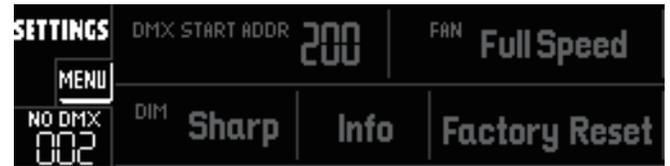

### • Fan speed options

Off	The fan is completely off. (Operation time is limited.)
Variable	The fan speed varies based on light intensity.
Silent	The fan operates at reduced speed.
Full Speed	The fan operates at full speed.

### • Dimming options

Sharp	Best for flash and strobe effects.
Smooth	Best for gradual fades.

### • Info

View current fixture firmware versions and fixture temperature.

