


INSTRUCTION

Evoke 5000B

● How to update the firmware of Evoke 5000B:



1. Download the firmware installation package from the website.
2. Place all four firmware files of the fixture in the root directory of the USB drive (make sure all firmware files are of the same version).
3. Insert the USB drive into the USB port of the fixture.
4. Enter the Menu → Fixture Settings → Firmware Update, rotate the "right knob" to Firmware Update.

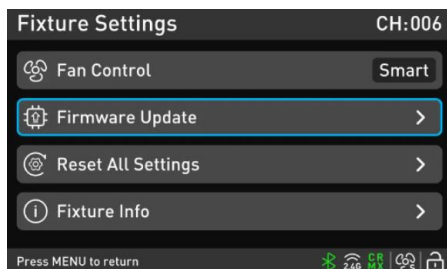


5. Press the "right knob" to the interface for searching the firmware file.



6. After the firmware file have been found, rotate the "right knob" to select Update to update the firmware.

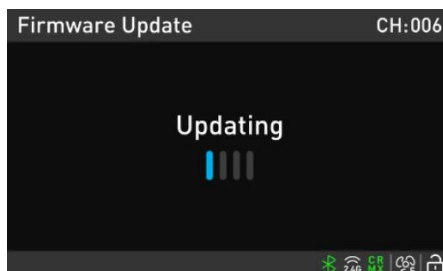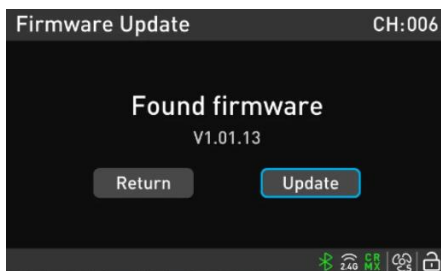

7. The fixture will restart automatically and work normally after the update is completed.

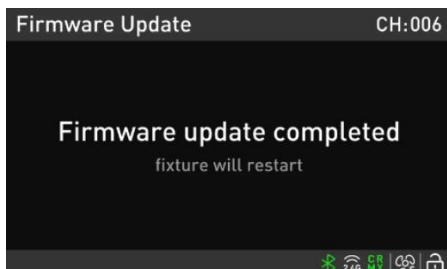

● Precautions:

1. Please do not rename the firmware file.
2. Ensure the USB drive is formatted to FAT, FAT32 or exFAT.
3. If it prompts "The versions of the firmware files don't match, please check the files and try again", please check whether the versions of the four firmware files are matched.
4. If it prompts "Missing parts of firmware files, please check the files and try again", please check whether there are four firmware files in the USB drive.
5. If it prompts "No firmware found", please check whether the firmware files are correct, whether the firmware files are stored in the root directory of the USB drive, or whether the USB drive format is FAT, FAT32 or exFAT.
6. If all the above steps are done and the firmware files still cannot be found, try to re-format the USB drive and update again.
7. If the fixture still cannot identify the USB drive, please replace the USB drive.